




Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX		5
	Media Player		6
	CD		7
	TV Audio		8
	FM		9
	M-XPort		Guide
	AM		Pre Ch
	Channel +		Ch +
	Channel -		Ch -
	Tune +		>>
	Tune -		<<

Originalfernbedienung Ersatzfernbedienung

	Red / Movie		Red
	Green / Music		Green
	Blue / Game		Blue
	Yellow / Pure		Yellow
	Info		Info
	Option		Options
	Volume +		Vol +
	Volume -		Vol -
	Mute		Mute
	Back		Back
	Setup		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Favorite Station 1		List





**Originalfernbedienung Ersatzfernbedienung**      **Originalfernbedienung Ersatzfernbedienung**

2	Favorite Station 2	SOUND DUAL	Dual		
3	Favorite Station 3	AD SUBT	Subt		
MultiEQ	MultiEQ	E-MANUAL D.MENU	D. Menu		
DYN EQ	DYN EQ	REPEAT TEXT	Text		
DYN VOL	DYN Vol	ZOOM	Eject		
M-DAX	M-DAX	TIMER AV	AV		

