 









 



 



 

 

 

 













**Originalfernbedienung    Ersatzfernbedienung**

	Open/Close		Eject / Surround
	Main Power		Shift + Power
	Main Power On		Power
	Source Power		AV / Input / RDS
	Phono		4
	CD		3
	AMP		1
	Tuner		6
	AUX		7
	DVD		2
	CD-R/Recorder		8
	Tape		5
	MD/Recorder 2		9
	Input Up		CH+ / Page+
	Vol+		Vol+
	Input Down		CH- / Page-
	Mute		Mute / Dimmer

**Originalfernbedienung    Ersatzfernbedienung**

	Vol-		Vol-
	Repeat		Green / APP / Repeat
	Q.Replay/Return		Back / Return
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Top Menu		D.Menu / Top
	Mode		Smart / List



