

 


 


 
 

 





 

 



 




 





 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX1		5
	Media Player		6
	TV/Audio		7
	AUX2		8
	Tuner		9
	USB		Guide
	CD		0
	Bluetooth		Pre Ch
	Internet Radio		Smart
	CH/Page+		Media
	CH/Page-		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH/Page-		Ch -
	Eco		3D
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	Option		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Back		Back
	Setup		Menu
	I<</Tune-		I<<
	Play		Play
	Pause		Pause





Originalfernbedienung Ersatzfernbedienung






 


 
 






 







 


 




TUNE +	>> /Tune+	>>	>>
1	Smart Select 1	E-MANUAL D.MENU	D. Menu
3	Smart Select 2	REPEAT TEXT	Text
2	Smart Select 3	ZOOM	Eject
4	Smart Select 4	TIMER AV	AV
MOVIE	Green/Movie	B	Green
MUSIC	Red/Music	A	Red
GAME	Blue/Game	D	Blue
PURE	Yellow/Pure	C	Yellow

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX1		5
	Media Player		6
	TV Audio		7
	AUX2		8
	Tuner		9
	USB		Guide
	CD		0
	Bluetooth		Pre Ch
	Internet Radio		Smart
	CH/Page+		Media
	CH/Page-		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH/Page-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Back		Back
	I<</Tune-		I<<
	Play		Play
	Pause		Pause
	>>I/Tune+		>>I
	Smart Select 1		D. Menu
	Smart Select 2		Text
	Smart Select 3		Eject





Originalfernbedienung Ersatzfernbedienung

4 Smart Select 4	TIMER AV AV

Originalfernbedienung Ersatzfernbedienung

