


 

 



 
 

 
 
 

 
 

 





 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	Media Player		2
	Blu-ray/DVD		3
	Game		4
	AUX		5
	Tuner		6
	USB		7
	Tv Audio		8
	CD		9
	Bluetooth		Guide
	Internet Radio		Pre Ch
	CH/Page+		Ch +
	CH/Page-		Ch -
	Eco		3D

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	Option		Options
	Back		Back
	Setup		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<</Tune-		I<<
	Play		Play
	Pause		Pause
	>>I/Tune+		>>I
	Smart Select 1		D. Menu





Originalfernbedienung Ersatzfernbedienung

SMART 2	Smart Select 2	REPEAT TEXT	Text
SELECT 3	Smart Select 3	ZOOM ▲	Eject
4	Smart Select 4	TIMER AV	AV
MOVIE	Green/Movie	B	Green
SOUND MUSIC	Red/Music	A	Red
MODE GAME	Blue/Game	D	Blue
PURE	Yellow/Pure	C	Yellow

Originalfernbedienung Ersatzfernbedienung

