























Originalfernbedienung Ersatzfernbedienung


 
 

 
 




 




 
 
 

 
 



 





 






 

	Power		Power
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Tv Audio		Dual
	Blu-ray		Shift + 3
	AUX1		Shift + 4
	Tuner		Shift + 5
	Bluetooth		Shift + 6
	Game		Shift + 7
	AUX2		Shift + 8
	Phono		Shift + 9
	USB		Pre Ch
	Media Player		Media
	CD		Guide
	Heos		Shift + 0
	Internet Radio		TV/R
	CH/Page+		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH/Page-		Ch -
	Sleep		Sleep
	Eco		3D
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	Option		Options
	Back		Back
	Setup		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Home		Smart
	Stop		Stop





 








 



Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Pause		Pause		4		4
	Play		Play		5		5
	I<</Tune-		I<<		6		6
	>>I/Tune+		>>I		7		7
	<<		<<		8		8
	>>		>>		9		9
	Smart Select 1		D. Menu		0		0
	Smart Select 2		Text				
	Smart Select 3		Eject				
	Smart Select 4		AV				
	Green/Movie		Green				
	Red/Music		Red				
	Blue/Game		Blue				
	Yellow/Pure		Yellow				
	1		1				
	2		2				
	3		3				








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Tv Audio		Dual
	Blu-ray		Shift + 3
	AUX1		Shift + 4
	Tuner		Shift + 5
	Bluetooth		Shift + 6
	Game		Shift + 7
	AUX2		Shift + 8
	Phono		Shift + 9
	USB		Pre Ch
	Media Player		Media
	CD		Guide
	Internet Radio		Shift + 0
	Internet Radio		TV/R
	CH/Page+		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH/Page-		Ch -
	Sleep		Sleep
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Back		Back
	Home		Smart
	Stop		Stop
	Pause		Pause
	Play		Play
	I<</Tune-		I<<
	>>/Tune+		>>I



 



 

 

 






Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	<<		<<
	>>		>>
	Smart Select 1		D. Menu
	Smart Select 2		Text
	Smart Select 3		Eject
	Smart Select 4		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0










 










 

 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Tv Audio		Dual
	Blu-ray		Shift + 3
	AUX1		Shift + 4
	Tuner		Shift + 5
	Bluetooth		Shift + 6
	Game		Shift + 7
	AUX2		Shift + 8
	Phono		Shift + 9
	USB		Pre Ch
	Media Player		Media
	CD		Guide
	Internet Radio		Shift + 0
	Internet Radio		TV/R
	CH/Page+		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH/Page-		Ch -
	Sleep		Sleep
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Back		Back
	Home		Smart
	Stop		Stop
	Pause		Pause
	Play		Play
	I<</Tune-		I<<
	>>/Tune+		>>I



