
 


 






 













 


 






 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	AMP Power	 + 	Shift + Power
	Tuner Preset Up	 CH	Ch +
	Tuner Preset	 CH	Ch -
	Tuner	 + 	Shift + 1
	CD	 + 	Shift + 2
	Recorder	 + 	Shift + 3
	Network	 + 	Shift + 4
	Phono	 + 	Shift + 5
	Coaxial	 + 	Shift + 6
	Optical	 + 	Shift + 7
	Mode		Media
	I<<		I<<
	>>I		>>I
	Stop		Stop
	Play		Play
	Pause		Pause

 


 



 

Originalfernbedienung Ersatzfernbedienung

	Input		AV
	Info		Info
	Source Direct		Smart
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Time/Top Menu		Menu
	Q.Replay/Call Favorites		Back
	Prog/Add to Favorites		Pre Ch
	Setup		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	1		1
	2		2









 




 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	AMP Power	 + 	Shift + Power
	Tuner Preset Up		Ch +
	Tuner Preset		Ch -
	Tuner	 + 	Shift + 1
	CD	 + 	Shift + 2
	Recorder	 + 	Shift + 3
	Network	 + 	Shift + 4
	Phono	 + 	Shift + 5
	Coaxial	 + 	Shift + 6
	Optical	 + 	Shift + 7
	Mode		Media
	I<<		I<<
	>>I		>>I
	Stop		Stop
	Play		Play
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	Source Direct		Smart
	Input		AV
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Time/Top Menu		Menu
	Q.Replay/Call Favorites		Back
	Prog/Add to Favorites		Pre Ch
	Setup		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	1		1
	2		2



