





 

 





 
 



 
 
 
 






 

 




 
 
 





Originalfernbedienung Ersatzfernbedienung

	AMP Power		Power
	CD Power	 + 	Shift + Power
	OPT1		D. Menu
	Coax/CD		Yellow
	OPT2		Format
	Analog1		Red
	Analog2		Green
	iPod/USB		Blue
	USB-DAC		3D
	I<<		I<<
	Play		Play
	Pause		Pause
	>>I		>>I
	Stop		Stop
	Random		Media
	Repeat		Text
	Mode		Subt

 




 

 

 

 

 





 


Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Dimmer		Smart
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Back		Back
	Setup		Options
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung




 
 
 
 
 



 
 
 
 
 



 






 



	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Clear		Exit
	Program		Sleep
	Time		AV
	Q.Replay		Dual
	A-B Repeat		TV/R

Originalfernbedienung Ersatzfernbedienung

 



 
 
 



 

 
 
 
 

 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	CD Power		Power
	AMP Power	 + 	Shift + Power
	OPT1		D. Menu
	OPT2		Format
	Coax/CD		Yellow
	Analog1		Red
	Analog2		Green
	iPod/USB		Blue
	USB-DAC		3D
	I<<		I<<
	Play		Play
	Pause		Pause
	>>I		>>I
	Stop		Stop
	Random		Media
	Repeat		Text
	Mode		Subt

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Dimmer		Smart
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Back		Back
	Setup		Options
	1		1
	2		2
	3		3
	4		4
	5		5





	Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	6	6		
	7	7		
	8	8		
	9	9		
	0	0		
	+10	+/--		
	Clear	GUIDE		Guide
	CLEAR	EXIT		Exit
	PROGRAM	PROG SLEEP		Sleep
	TIME	TIMER AV		AV
	Q.REPLAY	SOUND DUAL		Dual
	REPEAT A-B	SEARCH TV/R		TV/R

