 

 
 


 
 
 
 




 
 
 

 

 
 
 

 


 
 









Originalfernbedienung Ersatzfernbedienung

 


 

 
 


 
	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	Aux1		5
	Media Player		6
	Tv Audio		TV/R
	Aux2		7
	Tuner		8
	iPod/Usb		9
	M-XPort		Guide
	CD		0
	Network		Pre Ch
	Phono		Smart
	Internet Radio		Media

Originalfernbedienung Ersatzfernbedienung

	Ch/Page+		Ch +
	Ch/Page-		Ch -
	InstaPrevue		AV
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	Option		Options
	Back		Back
	Setup		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<</Tune-		I<<
	Play		Play



 

 
 


 
 
 
 




 
 
 

 

 
 
 

 


 
 







Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Pause		Pause				
	>> Tune+		>>				
	Favorite Station 1		Dual				
	Favorite Station 2		Subt				
	Favorite Station 3		Format				
	Red/Movie		Red				
	Green/Music		Green				
	Blue/Game		Blue				
	Yellow/Pure		Yellow				





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX1		5
	Media Player		6
	Tv Audio		TV/R
	AUX2		7
	Tuner		8
	iPod/USB		9
	M-Xport		Guide
	CD		0
	Network		Pre Ch
	Phono		Smart
	Internet Radio		Media

 

Originalfernbedienung Ersatzfernbedienung

	Ch/Page+		Ch +
	Ch/Page-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<</Tune-		I<<
	Play		Play
	Pause		Pause
	>>I/Tune+		>>I
	Favorite Station 1		Dual
	Favorite Station 2		Subt





Originalfernbedienung Ersatzfernbedienung

	Favorite Station 3		Format

Originalfernbedienung Ersatzfernbedienung

