

 









 



 

 



 















Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Video On/Off		Smart / List
	Dimmer		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	Clear		Exit / Cancel / Clear
	4		4
	5		5
	6		6
	+10		Guide / EPG / -/--
	7		7
	8		8
	9		9
	0		0
	Return		Back / Return

Originalfernbedienung Ersatzfernbedienung

	Program		TV/Radio /
	Search		Red / Netflix / Search
	Top Menu		D.Menu / Top
	Setup		Setup / OPT /
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Stop		Stop / Hold
	Down		Down
	Play		Play / Slow
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Random		Blue / Prime Video / Random
	Pause		Pause / Step / Freeze
	<<		<< / Tune-



