









 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		Shift + 0
	DVD		Shift + 2
	TV Audio		Shift + 1
	Blu-ray		Shift + 5
	AUX1		Shift + 7
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Shift + Fav / Marker / PC
	AUX2		Shift + Guide / EPG / -/-
	Phono		Shift + 4
	USB		Shift + 8
	Media Player		Display / Media
	CD		Shift + 3
	Online Music		Smart / List
	Internet Radio		Shift + Smart / List
	CH/Page+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Eco		D.Menu / Top
	Info		Info / Angle
	Up		Up
	Option		Shift + Setup / OPT / Tools
	Left		Left
	Right		Right
	Back		Back / Return
	Down		Down
	Setup		Setup / OPT /
	Home		Menu / Home
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze











 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		Shift + 0
	DVD		Shift + 2
	TV Audio		Shift + 1
	Blu-ray		Shift + 5
	AUX1		Shift + 7
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Shift + Fav / Marker / PC
	AUX2		Shift + Guide / EPG / -/-
	Phono		Shift + 4
	USB		Shift + 8
	Media Player		Display / Media
	CD		Shift + 3
	Online Music		Smart / List
	Internet Radio		Shift + Smart / List
	CH/Page+		CH+ / Page+



 
Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Right		Right
	Back		Back / Return
	Down		Down
	Home		Menu / Home
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<</Tune-		Shift + << /
	I<</Tune-		I<< / Preset-
	>>I/Tune+		>>I / Preset+







**Originalfernbedienung Ersatzfernbedienung**

	>>/Tune+		Shift + >> /
	<<		<< / Tune-
	>>		>> / Tune+
	Smart Select 1		Red / Netflix / Search
	Smart Select 2		Green / APP / Repeat
	Smart Select 3		Yellow / YouTube / Repeat
	Smart Select 4		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung Ersatzfernbedienung**











 



	Enter		OK







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	CBL/SAT		Shift + 0
	DVD		Shift + 2
	TV Audio		Shift + 1
	Blu-ray		Shift + 5
	AUX1		Shift + 7
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Shift + Fav / Marker / PC
	AUX2		Shift + Guide / EPG / -/-
	Phono		Shift + 4
	USB		Shift + 8
	Media Player		Display / Media
	CD		Shift + 3
	Online Music		Smart / List
	Internet Radio		Shift + Smart / List
	CH/Page+		CH+ / Page+

**Originalfernbedienung    Ersatzfernbedienung**

	Sleep		Sleep / Timer
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Right		Right
	Back		Back / Return
	Down		Down
	Home		Menu / Home
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<</Tune-		Shift + << /
	I<</Tune-		I<< / Preset-
	>>I/Tune+		>>I / Preset+



