 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		Shift + 0
	DVD		Shift + 2
	TV Audio		Shift + 1
	Blu-ray		Shift + 5
	AUX1		Shift + 7
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Shift + Fav / Marker / PC
	AUX2		Shift + Guide / EPG / -/--
	Phono		Shift + 4
	USB		Shift + 8
	Media Player		Display / Media
	CD		Shift + 3
	Online Music		Smart / List
	Internet Radio		Shift + Smart / List
	CH/Page+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Eco		D.Menu / Top
	Info		Info / Angle
	Up		Up
	Option		Shift + Setup / OPT / Tools
	Left		Left
	Right		Right
	Back		Back / Return
	Down		Down
	Setup		Setup / OPT /
	Home		Menu / Home
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze





Power **DIMMER MUTE** **SHIFT**

TV **DVD** **SAT** **AUX**
 SLOW STEP-FREEZE HOLD REC MODE

Play **Pause** **Stop** **Red**
 TUNE- TUNE+ PRESET- PRESET+

Left Arrow **Right Arrow** **Double Left Arrow** **Double Right Arrow**
 TITLE LANG/VI EQ SURROUND

SOUND **AUDIO** **SUBTITLE** **Up Arrow**
 FORMAT SIZE TIMER PROGRAM

PICTURE **ZOOM** **SLEEP** **TV/RADIO**
 TOP MENU OPT-TOOLS GOTO RDS

D.MENU **SETUP** **TEXT** **AV INPUT**

HOME **ANGLE**
MENU **INFO**

Left Arrow **OK** **Right Arrow**
Up Arrow **Down Arrow**

CLEAR **RETURN**
EXIT **BACK**

CANCEL **LIST** **CH PAGE**
+ **SMART** **+**
VOL **MEDIA** **CH**
- **DISPLAY** **-**

TV **DVD** **CD-STB**
1 **2** **3**
VIDEO **TAPE** **TUNER**

4 **5** **6**
AUX-HDD **USB** **BLUETOOTH**

7 **8** **9**
PC **HDMI-SAT** **PC**

GUIDE **0** **FAV MARKER**
EPG

NETFLIX **APP** **YouTube** **Prime Video**

SEARCH **REPEAT** **REPEAT A-B** **RANDOM**

Mandis shop
www.mandis.tv



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		Shift + 0
	DVD		Shift + 2
	TV Audio		Shift + 1
	Blu-ray		Shift + 5
	AUX1		Shift + 7
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Shift + Fav / Marker / PC
	AUX2		Shift + Guide / EPG / -/-
	Phono		Shift + 4
	USB		Shift + 8
	Media Player		Display / Media
	CD		Shift + 3
	Online Music		Smart / List
	Internet Radio		Shift + Smart / List
	CH/Page+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Right		Right
	Back		Back / Return
	Down		Down
	Home		Menu / Home
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<</Tune-		Shift + << /
	I<</Tune-		I<< / Preset-
	>>I/Tune+		>>I / Preset+



 


Originalfernbedienung Ersatzfernbedienung

The image shows a black Mandis TV remote control. At the top, there is a red power button, a 'DIMMER MUTE' button, and a yellow 'SHIFT' button. Below these are four blue buttons: 'TV' (SLOW), 'DVD' (STEP - FREEZE), 'SAT' (HOLD), and 'AUX' (REC MODE). The next row contains playback controls: play, pause, stop, and a red record button. This is followed by 'TUNE-' / 'PRESET-', 'TUNE+' / 'PRESET+', 'TUNE-' / 'PRESET+', and 'TUNE+' / 'PRESET+'. The next row has 'TITLE', 'LANG / I/II', 'EQ', and 'SURROUND'. Below that are 'SOUND', 'AUDIO', 'SUBTITLE', and an up arrow. The next row includes 'FORMAT', 'SIZE', 'TIMER', and 'PROGRAM'. This is followed by 'PICTURE', 'ZOOM', 'SLEEP', and 'TV / RADIO'. The next row has 'TOP MENU', 'OPT-TOOLS', 'GOTO', and 'RDS'. The final row in this section contains 'D.MENU', 'SETUP', 'TEXT', and 'AV INPUT'. Below these is a 'HOME' button and an 'ANGLE' button. The center features a blue directional pad with 'OK' in the middle. To the left of the pad are 'CLEAR' and 'EXIT' buttons, and to the right are 'RETURN' and 'BACK' buttons. Below the directional pad are 'CANCEL' and 'LIST' buttons. To the left of the numeric keypad is a large '+' button labeled 'VOL' and a '-' button. To the right is a large '+' button labeled 'CH PAGE' and a '-' button. The numeric keypad (0-9) is arranged in a 3x3 grid. Below the numeric keypad are buttons for 'TV', 'DVD', 'CD - STB', 'VIDEO', 'TAPE', 'TUNER', 'AUX - HDD', 'USB', 'BLUETOOTH', 'GUIDE EPG', 'HDMI - SAT', 'PC', and 'FAV MARKER'. At the bottom, there are four colored buttons: 'NETFLIX' (red), 'APP' (green), 'YouTube' (yellow), and 'Prime Video' (blue). Below these are 'SEARCH', 'REPEAT', 'REPEAT A-B', and 'RANDOM' buttons. The Mandis logo and 'shop' are printed at the bottom, along with the website 'www.mandis.tv'.



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		Shift + 0
	DVD		Shift + 2
	TV Audio		Shift + 1
	Blu-ray		Shift + 5
	AUX1		Shift + 7
	Tuner		Shift + 6
	Bluetooth		Shift + 9
	Game		Shift + Fav / Marker / PC
	AUX2		Shift + Guide / EPG / -/--
	Phono		Shift + 4
	USB		Shift + 8
	Media Player		Display / Media
	CD		Shift + 3
	Online Music		Smart / List
	Internet Radio		Shift + Smart / List
	CH/Page+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Right		Right
	Back		Back / Return
	Down		Down
	Home		Menu / Home
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<</Tune-		Shift + << /
	I<</Tune-		I<< / Preset-
	>>I/Tune+		>>I / Preset+





Originalfernbedienung Ersatzfernbedienung

The image shows a black Mandis remote control with a variety of buttons. At the top, there is a power button (red circle with a power symbol), a DIMMER MUTE button (black with white text), and a SHIFT button (yellow circle with black text). Below these are four function buttons: TV, DVD, SAT, and AUX. The main section of the remote contains numerous buttons for media control, including SLOW, STEP-FREEZE, HOLD, REC MODE, play, pause, stop, first, previous, next, last, and a red emergency stop button. There are also buttons for TUNE-, TUNE+, PRESET-, PRESET+, TITLE, LANG/VI, EQ, SURROUND, SOUND, AUDIO, SUBTITLE, FORMAT, SIZE, TIMER, PROGRAM, PICTURE, ZOOM, SLEEP, TV/RADIO, TOP MENU, OPT-TOOLS, GOTO, RDS, D.MENU, SETUP, TEXT, and AV INPUT. Below this section are HOME, MENU, and INFO buttons. In the center is a directional pad with an OK button. To the left of the pad are CLEAR, EXIT, and CANCEL buttons. To the right are RETURN, BACK, and a CH PAGE button. Below the directional pad are TV, DVD, and CD-STS buttons. The numeric keypad (0-9) is located below the directional pad. At the bottom, there are buttons for AUX-HDD, USB, BLUETOOTH, GUIDE EPG, HDMI-SAT, PC, and FAV MARKER. The very bottom of the remote features a row of four colored buttons: Netflix (red), App (green), YouTube (yellow), and Prime Video (blue). Below these are SEARCH, REPEAT, REPEAT A-B, and RANDOM buttons. The Mandis logo and website address (www.mandis.tv) are printed at the bottom.