



Originalfernbedienung Ersatzfernbedienung

	On		Power
	Mute		Mute / Dimmer
	T.Tone		Sound / Title
	Audio		Audio / Lang I/II
	EQ		Subtitle / EQ
	BD		Picture / Format
	A/D		Zoom / Size
	Sleep		Sleep / Timer
	Top		D.Menu / Top
	Setup		Setup / OPT /
	Auto		Text / Goto
	LIP Sync		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK














Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Volume+		Vol+
	GAME		Smart / List
	CH+		CH+ / Page+
	Volume-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	AUX1		1
	DVD		2
	CD		3
	VCR		4
	TUNE		6
	Standby		Shift + Power
	Dimmer		Shift + Mute / Dimmer
	Surr Mode		Shift + Sound / Title





Originalfernbedienung Ersatzfernbedienung

	Stereo		Shift + Audio / Lang I/II
	Night		Shift + Sleep / Timer
	Input Up		Shift + Up
	CH Sel		Shift + OK
	Input Down		Shift + Down
	Bass+		Shift + Vol+
	DSS		Shift + Smart / List
	Treble+		Shift + CH+ /
	Bass-		Shift + Vol-
	HT EQ		Shift + Display / Media
	Treble-		Shift + CH- /
	AUX2		Shift + 2









 







 







 

 

 

 


Originalfernbedienung Ersatzfernbedienung








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Volume+		Vol+
	Display		Display / Media
	Audio		Audio / Lang I/II
	Volume-		Vol-
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Memo		Smart / List
	Pause		Pause / Step / Freeze
	Play		Play / Slow

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	CH-		CH- / Page-
	CH+		CH+ / Page+
	1		1
	2		2
	3		3
	Repeat		Green / APP / Repeat
	4		4
	5		5
	6		6
	Random		Blue / Prime Video / Random
	7		7
	8		8







