
 
















 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV/Radio		TV/R
	←PR		Back
	FAV		Pre Ch
	Menu		Menu
	SAT		Smart

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Page Up		>>
	Page Down		<<
	Up / PR+		Up
	Up / PR+		Ch +
	Down / PR-		Down
	Down / PR-		Ch -
	Right / Vol+ / W		Right
	Left / Vol- / E		Left
	Right / Vol+ / W		Vol +
	Left / Vol- / E		Vol -
	OK / List		Ok
	OK / List		List
	Exit		Exit
	EPG		Guide
	TV/AV		AV
	Pause		Shift + Pause





**Originalfernbedienung   Ersatzfernbedienung**

	PAL/NTSC		Format
	UHF		Media
	Red / Audio		Red
	Red / Audio		Dual
	Green / Position		Green
	Yellow / Subtitle		Yellow
	Yellow / Subtitle		Subt
	Blue / L/R		Blue
	REW		<<
	Play / Slow		Play
	Stop		Stop
	F.F		>>
	Pause ( For PVR )		Pause
	Rec		Rec

**Originalfernbedienung   Ersatzfernbedienung**