



Originalfernbedienung Ersatzfernbedienung

	Open / Close		Eject / Surround
	Power		Power
	VCR		Shift + 4
	DVD		Shift + 2
	Input		AV / Input / RDS
	1 / Tracking -		Shift + Left
	1 / Tracking -		1
	2		2
	3 / Tracking +		3
	3 / Tracking +		Shift + Right
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / VCR		TV/Radio /





 

 


Originalfernbedienung Ersatzfernbedienung

	0		0
	Clear		Exit / Cancel / Clear
	Menu		Menu / Home
	Up / PR +		Up
	Up / PR +		CH+ / Page+
	Setup		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Timer		Sleep / Timer
	Down / PR -		CH- / Page-
	Down / PR -		Down
	Display		Display / Media
	Rec		Rec / Rec Mode
	Rec Mode		Shift + Rec / Rec Mode
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II





Originalfernbedienung Ersatzfernbedienung

	<< REW		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	FF >>		>> / Tune+
	I<< Prev		I<< / Preset-
	Stop		Stop / Hold
	Next >>I		>>I / Preset+
	Skip		Back / Return
	Title / PBC		Sound / Title
	Slow -		Vol-
	Slow +		Vol+
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Zoom		Zoom / Size
	Angle		Info / Angle

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Open / Close		Eject / Surround
	Power		Power
	VCR		Shift + 4
	DVD		Shift + 2
	Input		AV / Input / RDS
	1 / Tracking -		Shift + Left
	1 / Tracking -		1
	2		2
	3 / Tracking +		3
	3 / Tracking +		Shift + Right
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / VCR		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

	0		0
	Clear		Exit / Cancel / Clear
	Menu		Menu / Home
	Up / PR +		Up
	Up / PR +		CH+ / Page+
	Setup		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Timer		Sleep / Timer
	Down / PR -		CH- / Page-
	Down / PR -		Down
	Display		Display / Media
	Rec		Rec / Rec Mode
	Rec Mode		Shift + Rec / Rec Mode
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II





Originalfernbedienung Ersatzfernbedienung

	<< REW		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	FF >>		>> / Tune+
	I<< Prev		I<< / Preset-
	Stop		Stop / Hold
	Next >>I		>>I / Preset+
	Skip		Back / Return
	Title / PBC		Sound / Title
	Slow -		Vol-
	Slow +		Vol+
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Zoom		Zoom / Size
	Angle		Info / Angle

Originalfernbedienung Ersatzfernbedienung

