

 






 

 
 
 



 
 

 
 
 


 

 

 
 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	PC Auto / Open/Close		Eject
	Fav		Pre Ch
	Fav+		Shift + Right
	Fav-		Shift + Left
	P.Mode		Shift + Format
	S.Mode		Dual
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9




 


 

 




 
Originalfernbedienung Ersatzfernbedienung

	0		0
	-/--		Shift + Guide
	Recall		Back
	Info		Info
	Input		AV
	Aspect		Format
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Mute		Mute
	Exit / DVD Setup		Exit
	Exit / DVD Setup		Options
	Vol+		Vol +
	Vol-		Vol -





Originalfernbedienung Ersatzfernbedienung

	Audio / Lang	 + 	Shift + Dual
	CH+		Ch +
	CH-		Ch -
	Text / Angle		Text
	Zoom / Hold	 + 	Shift + Eject
	TV/Radio /		TV/R
	TV/Radio /		D. Menu
	EPG / Title		Guide
	Index / D.Disp		Smart
	Play/Pause / Size		Play
	Play/Pause / Size		Pause
	<< / Reveal		<<
	>> / Subpage / Subtitle		>>
	>> / Subpage / Subtitle		Subt
	Goto		Media
	Stop		Stop
	I<<		I<<

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	Red / Program		Red
	Green / Intro		Green
	Yellow / Repeat		Yellow
	Yellow / Repeat	 + 	Shift + Text
	Blue / A-B		Blue

