





































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red/EPG		Red / Netflix / Search
	Red/EPG		Guide / EPG / -/--
	Tv/Radio		TV/Radio /
	Pause		Pause / Step / Freeze
	Green/Audio		Green / APP / Repeat
	Green/Audio		Audio / Lang I/II
	Info		Info / Angle
	Recall		Back / Return
	Yellow/Pg		Yellow / YouTube / Repeat
	Yellow/Pg		Sleep / Timer
	Yellow/Pg		Shift + CH+ /
	TXT		Text / Goto
	Blue/PgDw/Forma		Blue / Prime Video / Random
	Blue/PgDw/Forma		Shift + CH- /
	Blue/PgDw/Forma		Picture / Format

Originalfernbedienung Ersatzfernbedienung

	Up/CH+		Up
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	Down/CH-		Down
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	A-Z		Setup / OPT /
	SAT		Shift + 0
	FAV		Fav / Marker / PC
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	FAV+		CH+ / Page+
	0		0
	FAV-		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

