



 






 













 

 





Originalfernbedienung Ersatzfernbedienung

	Smart		Smart / List
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	CH List		Shift + Smart / List
	0		0
	Source		AV / Input / RDS
	Home		Shift + Menu /
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	Google Play		Display / Media
	Vol+		Vol+
	[i+]		Info / Angle
	P+		CH+ / Page+
	Vol-		Vol-
	Guide		Guide / EPG / -/-
	P-		CH- / Page-
	<</Reveal		<< / Tune-
	Play/Index		Play / Slow



