



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	CH List		Smart / List
	0		0
	Return/Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Right		Right
	Home		D.Menu / Top
	Down		Down
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	Vol+		Vol+
	Info		Info / Angle
	PR+		CH+ / Page+
	Vol-		Vol-
	EPG		Guide / EPG / -/-
	PR-		CH- / Page-
	Rec		Rec / Rec Mode
	Nicam I/II		Audio / Lang I/II
	Text		Text / Goto
	AD/Subpage		Sound / Title





Originalfernbedienung Ersatzfernbedienung

SIZE FAV	FAV/Size	PC FAV MARKER	Fav / Marker / PC
SIZE FAV	FAV/Size	SIZE ZOOM	Zoom / Size
HOLD QUICK	Quick/Hold	MEDIA DISPLAY	Display / Media
Red	Red	NETFLIX SEARCH	Red / Netflix / Search
Green	Green	APP REPEAT	Green / APP / Repeat
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random
INDEX ▶/	Play	SLOW ▶	Play / Slow
INDEX ▶/	Pause/Index	STEP-FREEZE 	Pause / Step / Freeze
REVEAL ◀◀	<</Reveal	TUNE- ◀◀	<< / Tune-
MIX ▶▶	>>/Mix	TUNE+ ▶▶	>> / Tune+
CANCEL ■	Stop/Cancel	HOLD ■	Stop / Hold

Originalfernbedienung Ersatzfernbedienung


