 




 


 





 

 
























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Internet		Smart / List
	Source		AV / Input / RDS
	Lang		Audio / Lang I/II
	Tv/Radio		TV/Radio /
	Subtitle		Subtitle / EQ
	LIB		Picture / Format
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	>>		>> / Tune+
	Menu		Menu / Home
	Up		Up
	Back		Back / Return
	Left		Left
	OK		OK
	Right		Right
	i		Info / Angle
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	P::P		Display / Media
	PR+		CH+ / Page+
	Vol-		Vol-
	FAV		Fav / Marker / PC
	PR-		CH- / Page-
	1		1





Originalfernbedienung Ersatzfernbedienung

2 _{abc}	2	DVD 2	2
3 _{def}	3	CD - STB 3	3
4 _{ghi}	4	VIDEO 4	4
5 _{jkl}	5	TAPE 5	5
6 _{mno}	6	TUNER 6	6
7 _{pqrs}	7	AUX - HDD 7	7
8 _{tuv}	8	USB 8	8
9 _{wxyz}	9	BLUETOOTH 9	9
TEXT	Text	GOTO TEXT	Text / Goto
0 __	0	HDMI - SAT 0	0
GUIDE	Guide	GUIDE EPG	Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

