
 




















 





 




 



 




 

 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	TV		TV/R
	Video		Smart
	PC		Media
	Text		Text
	P+		Ch +
	Up		Up
	P-		Ch -
	Down		Down
	Right		Right
	Vol+		Vol +
	Left		Left
	Vol-		Vol -
	Menu		Menu
	Menu		Ok
	Mute		Mute
	Red / M		Red
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Guide
	L / ?		List
	Freeze		Pause
	M/S		Options
	PIP		3D





Originalfernbedienung Ersatzfernbedienung

	Auto		Back
	F[+]		Format
	i		Info
	F1	+	Shift + 1
	Clock		AV
	F2	+	Shift + 2
	F3	+	Shift + 3
	F4	+	Shift + 4
	Power		Power

Originalfernbedienung Ersatzfernbedienung

