








 











 





 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	TXT		Text
	Menu		Menu
	Exit		Exit
	Back		Back
	Tools		Options

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	Source		AV
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	?		List
	@		Smart
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +



