






 

 

 

 

 



 
 
 





 

 





 
 
 

 
 
 

 

 
 



 

 









 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	PP		Pre Ch
	Mute		Mute
	I-II		Dual
	P<P		Back
	-/--		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	M		Ok
	PR+		Ch +
	PR-		Ch -
	M		Menu
	Red/Sound		Red
	Green/Picture		Green
	Yellow/Feature		Yellow
	Blue/Install		Blue
	TV		TV/R
	AV		AV
	[≡]		Text
	[≡o]		Smart





Originalfernbedienung Ersatzfernbedienung

	[≡+]		Subt
	[≡x]		Options
	[.:≡]		Media
	[≡?]		Format
	[≡i]		List
	[≡◆]		3D
	[i]/Info		Info

Originalfernbedienung Ersatzfernbedienung

