

 




 



 




 


 

 
 

 







 











 

 
 


 
 
 



 

 


 

 



 





 
 
 


 

 
 

 


 



 
 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		8tuv	 8
Mute		9wxyz	 9
Opt?		Guide Pilote	 Guide
TV/SAT		0/10	 0
Menu		FAV Pref.	 Pre Ch
Menu Up		Green	 Green
Menu Down		Yellow	 Yellow
CH/Page+		Blue	 Blue
Audio		Dev	 D. Menu
CH/Page-		Store	 Sleep
1. ?		50j17	 List
2abc		H/V Play	 Play
3def			
4ghi			
5jkl			
6mno			
7pqrm			



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		Power	
Mute		Mute	
TV		TV/R	
Menu		Menu	
Menu Up		Up	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Exit		Exit	
Menu Down		Down	
Volume+		Vol +	
CH/Page+		Ch +	
Volume-		Vol -	
Audio		Dual	
CH/Page-		Ch -	
1. ?		1	
2abc		2	
3def		3	
4ghi		4	
5jkl		5	
6mno		6	
7pqrm		7	
8tuv		8	
9wxyz		9	
0/10		0	
FAV Pref.		Pre Ch	
West		l<<	
Dev		>>	
Dec/Pause		Pause	
Freeze		Stop	
H/V Play		Play	
Lang./Rewind		<<	
East		>>l	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		1. ?	 1
Mute		2abc	 2
Info	 +  Shift + Info	3def	 3
TV		4ghi	 4
TV/SAT		5jkl	 5
Menu		6mno	 6
Menu Up		7pqrm	 7
Display		8tuv	 8
Menu Left		9wxyz	 9
OK Enter		Guide Pilote	 Guide
Menu Right		0/10	 0
Menu Down		FAV Pref.	 Pre Ch
Volume+		Scan/Setup	 Options
CH/Page+		Radio	 +  Shift + TV/R
Volume-			
Audio			
CH/Page-	