




Originalfernbedienung Ersatzfernbedienung

MODE	Mode	TOP MENU D.MENU	D.Menu / Top
SETUP	Setup	OPT-TOOLS SETUP	Setup / OPT /
MENU	Menu	HOME MENU	Menu / Home
TITLE	Title	TITLE SOUND	Sound / Title
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
SUB-TITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
9	9	BLUETOOTH 9	9
0	0	HDMI - SAT 0	0
+10	+10	GUIDE EPG	Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

SCREEN	Screen	FORMAT PICTURE	Picture / Format
ANGLE	Angle	ANGLE INFO	Info / Angle
I<<	I<<	PRESET- I<<	I<< / Preset-
>>I	>>I	PRESET+ >>I	>>I / Preset+
<<	<<	TUNE- <<	<< / Tune-
>>	>>	TUNE+ >>	>> / Tune+
Vol+	Vol+	+ VOL	Vol+
Disp	Disp	MEDIA DISPLAY	Display / Media
Up	Up	▲	Up
Vol-	Vol-	▼	Vol-
Left	Left	◀	Left
OK	OK	OK	OK
Right	Right	▶	Right
Play	Play	SLOW ▶	Play / Slow
Pause	Pause	STEP - FREEZE II	Pause / Step / Freeze
Down	Down	▼	Down
Stop	Stop	HOLD ■	Stop / Hold

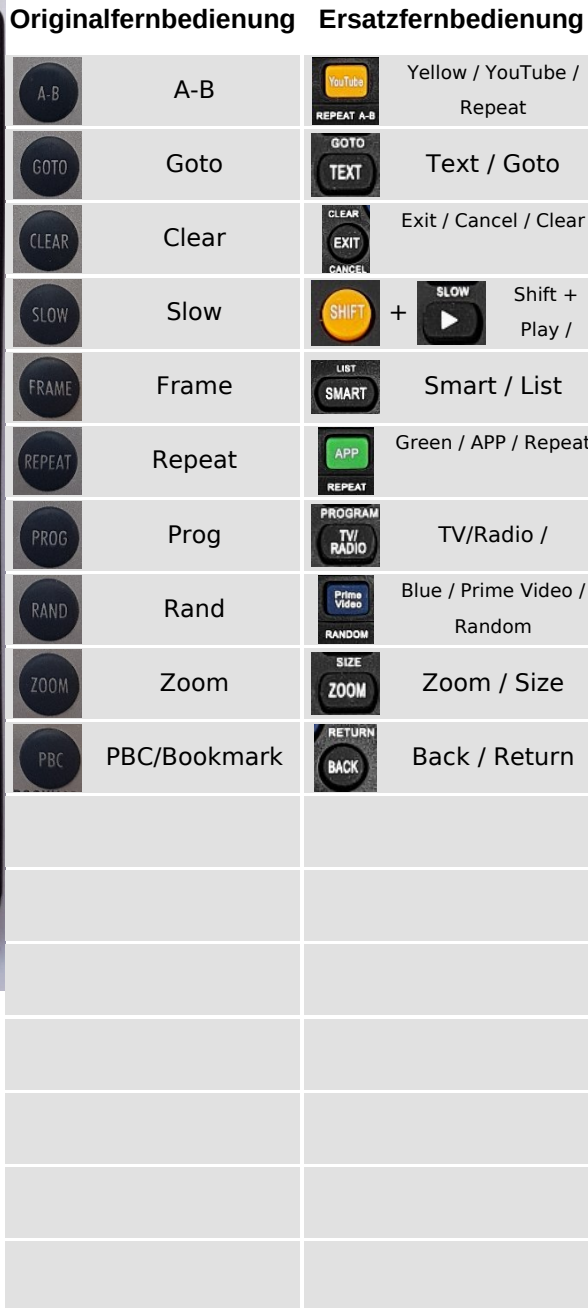

[illegible]