

 







 













 

 
 
 

 

 











**Originalfernbedienung Ersatzfernbedienung**

|   |            |   |                    |
|---|------------|---|--------------------|
|    | Power      |    | Power              |
|    | Open/Close |    | Eject / Surround   |
|    | Scan       |    | Display / Media    |
|    | Swap       |    | Back / Return      |
|    | Call       |    | Shift + OK         |
|    | Mute       |    | Mute / Dimmer      |
|    | 1          |    | 1                  |
|    | 2          |    | 2                  |
|    | 3          |    | 3                  |
|    | 4          |    | 4                  |
|   | 5          |   | 5                  |
|  | 6          |  | 6                  |
|  | 7          |  | 7                  |
|  | 8          |  | 8                  |
|  | 9          |  | 9                  |
|  | 0          |  | 0                  |
|  | -/--       |  | Guide / EPG / -/-- |

**Originalfernbedienung Ersatzfernbedienung**

|   |               |   |                             |
|---|---------------|---|-----------------------------|
|    | TV/AV         |    | AV / Input / RDS            |
|    | P+            |    | CH+ / Page+                 |
|    | TV/DVD        |    | Smart / List                |
|    | V-            |    | Vol-                        |
|    | Menu          |    | Menu / Home                 |
|    | V+            |    | Vol+                        |
|    | Exit          |    | Exit / Cancel / Clear       |
|    | P-            |    | CH- / Page-                 |
|    | P.STD         |    | Picture / Format            |
|    | Red/Picture   |    | Shift + Picture / Format    |
|   | Red/Picture   |   | Red / Netflix / Search      |
|  | Green/Sound   |  | Sound / Title               |
|  | Green/Sound   |  | Green / APP / Repeat        |
|  | Yellow/Time   |  | Yellow / YouTube / Repeat   |
|  | Blue/Function |  | Blue / Prime Video / Random |
|  | <<            |  | << / Tune-                  |
|  | >>            |  | >> / Tune+                  |









 

 











 

 

 

 
 











**Originalfernbedienung Ersatzfernbedienung**

|   |              |   |                             |
|---|--------------|---|-----------------------------|
|    | Power        |    | Power                       |
|    | Open / Close |    | Eject / Surround            |
|    | Scan         |    | Shift + Setup / OPT / Tools |
|    | Swap         |    | Back / Return               |
|    | Call         |    | Smart / List                |
|    | Mute         |    | Mute / Dimmer               |
|    | 1            |    | 1                           |
|    | 2            |    | 2                           |
|    | 3            |    | 3                           |
|   | 4            |   | 4                           |
|  | 5            |  | 5                           |
|  | 6            |  | 6                           |
|  | 7            |  | 7                           |
|  | 8            |  | 8                           |
|  | 9            |  | 9                           |
|  | 0            |  | 0                           |
|  | -/--         |  | Guide / EPG / -/--          |

**Originalfernbedienung Ersatzfernbedienung**

|   |               |   |                           |
|---|---------------|---|---------------------------|
|    | TV/AV         |    | AV / Input / RDS          |
|    | I-II          |    | Shift + Audio / Lang I/II |
|    | P+            |    | CH+ / Page+               |
|    | TV/DVD        |    | Shift + 2                 |
|    | TV/DVD        |    | Shift + 1                 |
|    | V-            |    | Vol-                      |
|    | Menu          |    | Menu / Home               |
|    | V+            |    | Vol+                      |
|    | Exit          |    | Exit / Cancel / Clear     |
|   | P-            |   | CH- / Page-               |
|  | P.Std         |  | Picture / Format          |
|  | Red / Picture |  | Red / Netflix / Search    |
|  | Red / Picture |  | Shift + Picture / Format  |
|  | Green / Sound |  | Green / APP / Repeat      |
|  | Green / Sound |  | Shift + Sound / Title     |
|  | Yellow / Time |  | Yellow / YouTube / Repeat |
|  | Yellow / Time |  | Sleep / Timer             |





 

 

 

 





 

 

 

 

 





 

 





**Originalfernbedienung Ersatzfernbedienung**

|   |                 |   |                             |
|---|-----------------|---|-----------------------------|
|    | Blue / Function |    | Blue / Prime Video / Random |
|    | Rev             |    | << / Tune-                  |
|    | Fwd             |    | >> / Tune+                  |
|    | I<<             |    | I<< / Preset-               |
|    | >>I             |    | >>I / Preset+               |
|    | Stop            |    | Stop / Hold                 |
|    | Setup           |    | Setup / OPT /               |
|    | Pause / Step    |    | Pause / Step / Freeze       |
|    | White / Tune    |    | Display / Media             |
|    | D.Menu          |    | D.Menu / Top                |
|   | Up              |   | Up                          |
|  | Repeat          |  | Shift + Green / APP /       |
|  | A-B             |  | Shift + Yellow / YouTube /  |
|  | Left            |  | Left                        |
|  | Play / Enter    |  | Play / Slow                 |
|  | Play / Enter    |  | OK                          |
|  | Right           |  | Right                       |

**Originalfernbedienung Ersatzfernbedienung**

|   |             |   |                               |
|---|-------------|---|-------------------------------|
|    | Slow        |    | Shift + Play /                |
|    | Angle       |    | Info / Angle                  |
|    | Down        |    | Down                          |
|    | Title / PBC |    | Sound / Title                 |
|    | Search      |    | Shift + Red / Netflix /       |
|    | Audio       |    | Audio / Lang I/II             |
|    | Program     |    | TV/Radio /                    |
|    | Zoom        |    | Zoom / Size                   |
|    | D.Call      |    | Shift + Smart / List          |
|    | 10+         |    | Shift + Guide / EPG / -/-     |
|   | Caption     |   | Subtitle / EQ                 |
|  | Hold        |  | Shift + Stop /                |
|  | [-]         |  | Shift + TV/Radio / Program    |
|  | Mix         |  | Shift + Text /                |
|  | Text        |  | Text / Goto                   |
|  | [X]         |  | Shift + Exit / Cancel / Clear |
|  | Reveal      |  | Shift + Sleep / Timer         |





