


Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|------------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Mute |  | Mute / Dimmer |
|  | 0 |  | 0 |
|  | 16:9 |  | Picture / Format |
|  | S/M/D |  | Display / Media |
|  | PP |  | Back / Return |
|  | →← |  | Smart / List |
|  | P+ |  | CH+ / Page+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-----------------------------|
|  | P+ |  | Up |
|  | V- |  | Vol- |
|  | V- |  | Left |
|  | Menu |  | Menu / Home |
|  | Menu |  | OK |
|  | V+ |  | Vol+ |
|  | V+ |  | Right |
|  | P- |  | CH- / Page- |
|  | P- |  | Down |
|  | Tv |  | TV/Radio / |
|  | Exit |  | Exit / Cancel / Clear |
|  | Av |  | AV / Input / RDS |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | ≡Text |  | Text / Goto |



