



















 





















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	EPG		Guide / EPG / -/--
	Teletext		Text / Goto
	Select		Smart / List
	Confirm		D.Menu / Top
	Title		Sound / Title
	Eject		Eject / Surround
	Menu		Menu / Home
	Option		Shift + Setup / OPT / Tools
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	Zoom		Zoom / Size
	0		0
	Goto		Shift + Text /
	i/Display		Display / Media
	Guide		Shift + Guide / EPG / -/--
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Rec		Rec / Rec Mode
	Down		Down
	Return		Back / Return
	Vol-		Vol-
	Vol+		Vol+
	<<		<< / Tune-
	Stop		Stop / Hold





**Originalfernbedienung    Ersatzfernbedienung**

	Play		Play / Slow
	>>		>> / Tune+
	I<<		I<< / Preset-
	I>/Slow		Info / Angle
	Pasue/Step		Pause / Step / Freeze
	>>I		>>I / Preset+
	Source		AV / Input / RDS
	Time Shift		Picture / Format
	Repeat	+	Shift + Green / APP / REPEAT
	aA/Subtitle		Subtitle / EQ
	Setup		Setup / OPT /
	Red		Red / Netflix / Search
	Tv System		TV/Radio /
	Green		Green / APP / Repeat
	Audio		Audio / Lang I/II
	Yellow		Yellow / YouTube / Repeat
	Mute		Mute / Dimmer

**Originalfernbedienung    Ersatzfernbedienung**

	Blue		Blue / Prime Video / Random

