


 





 





 








 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Ch+		Ch +
	Ch+		Up
	Ch-		Ch -

Originalfernbedienung Ersatzfernbedienung

	Ch-		Down
	Vol+		Vol +
	Vol+		Right
	Vol-		Vol -
	Vol-		Left
	OK		Ok
	Red/EPG		Red
	Red/EPG		Guide
	Yellow/Subtitle		Yellow
	Yellow/Subtitle		Subt
	Blue/TTX		Text
	Blue/TTX		Blue
	Green/Audio		Green
	Green/Audio		Dual
	i		Info
	FAV		Pre Ch
	TV/Radio		TV/R





Originalfernbedienung Ersatzfernbedienung

	Video		Format
	Prog		Sleep
	File		Media
	Device		Smart
	REC		Rec
	Zoom		Eject
	Stop		Stop
	Prev		I<<
	Next		>>I
	Play/Pause		Play
	Play/Pause		Pause
	<<		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung