 






Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 Power2	 Shift + Power
 Mute	 Mute
 PP	 Back
 [ ]	 Format
 Input	 AV
 [ * ]	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originalfernbedienung	Ersatzfernbedienung
 -/--	 Guide
 ←•→ +	 Ch +
 ←•→ -	 Ch -
 Contrast+	 Up
 Contrast-	 Down
 Brightness+	 Right
 Brightness-	 Left
 Color+	 >>
 Color-	 <<
 Vol+	 Vol +
 Vol-	 Vol -

