





 
 
 
 
 

 
 
 

 







 
 
 
 
 


 
 
 
 
 
 

 

 


 
 

 

 




 
 
 

 
 




**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Recall		Back
	EPG		Guide
	Audio		Dual
	Subtitle		Subt

**Originalfernbedienung Ersatzfernbedienung**

	TV / Radio		TV/R
	Menu		Menu
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Record		Rec
	Stop		Stop
	Vol +		Vol +
	Vol -		Vol -
	TTX		Text
	FAV		Pre Ch
	CH +		Ch +
	CH -		Ch -
	Media		Media




**Originalfernbedienung Ersatzfernbedienung**

Originalfernbedienung	Ersatzfernbedienung
I<< Prev	I<<
Play	Play
<< Rew	<<
USB	Smart
>>I Next	>>I
Pause	Pause
>> Fwd	>>
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue

**Originalfernbedienung Ersatzfernbedienung**