



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|--|-------------------|
| | Power | | Power |
| | CD | | 3 |
| | Tuner | | 6 |
| | Aux | | 7 |
| | Tape/Monitor | | 5 |
| | DVD | | 2 |
| | Video | | 4 |
| | VCR1 | | 1 |
| | VCR2 | | 8 |
| | Seek- | | << / Tune- |
| | Seek+ | | >> / Tune+ |
| | Preset- | | I<< / Preset- |
| | Preset+ | | >>I / Preset+ |
| | FM | | Left |
| | AM | | Right |
| | Surround Off | | Sound / Title |
| | Dolby Digital | | Audio / Lang I/II |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------------|--|------------------|
| | Pro Logic | | Subtitle / EQ |
| | DTS | | Menu / Home |
| | Natural | | Eject / Surround |
| | Hall | | Picture / Format |
| | M Range | | D.Menu / Top |
| | LFE Att. | | Zoom / Size |
| | Display | | Display / Media |
| | Mute | | Mute / Dimmer |
| | Volume+ | | Vol+ |
| | Volume- | | Vol- |
| | Speaker Select | | CH- / Page- |
| | Speaker Mode | | CH+ / Page+ |
| | Balance | | TV/Radio / |

