

 
 
 
 
 

 

 
 

 






 

 

 

 

 

 

 



 

 

 


 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu
	3D		3D
	TV Input		TV/R
	AV Input		AV
	i		Info
	Exit		Exit
	APPS		Media
	Home		Smart
	Guide		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Option		Options
	Return/Back		Back

Originalfernbedienung Ersatzfernbedienung

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Mute		Mute
	Text		Text
	STTL		Subt
	[+]/Aspect		Format
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

6 _{mno}	6	6	6
7 _{pqrs}	7	7	7
8 _{tuv}	8	8	8
9 _{wxyz}	9	9	9
0	0	0	0
? e-HELP	?/Help	SOUND DUAL	Dual
LAST VIEW	Last View	FAV PRE-CH	Pre Ch
<<	<<	<<	<<
▶	Play	PLAY MODE ▶	Play
>>	>>	>>	>>
I<<	I<<	I<<	I<<
	Pause	 	Pause
>>	>>	>> 	>>
■	Stop	■	Stop
●	Rec	REC MODE ●	Rec

Originalfernbedienung Ersatzfernbedienung

