



Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	TV		TV/R
	VCR / AUX		Shift + TV/R
	SLEEP		Sleep
	TV / AV		AV
	TUNER / BAND		Smart
	DVD / CD		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	≧10 / -/--		Guide
	Cancel		Exit
	CH +		Ch +
	CH -		Ch -
	VOL +		Vol +
	VOL -		Vol -
	SKIP PREV.		I<<
	SKIP NEXT		>>I
	SLOW/SEARCH		<<
	SLOW/SEARCH		>>
	STOP		Stop
	PAUSE		Pause
	PLAY		Play
	TOP MENU / DIR. NAV.		D. Menu
	MENU / PLAY LIST		Menu
	UP		Up
	LEFT		Left


 




Originalfernbedienung Ersatzfernbedienung

	ENTER		Ok
	RIGHT		Right
	DOWN		Down
	DISPLAY / TV VOL-		Info
	DISPLAY / TV VOL-		Shift + Vol -
	RETURN / TV		Shift + Vol +
	RETURN / TV		Back
	SUBWOOFER		3D
	SFC		Green
	C. FOCUS		Shift + 1
	SUPER SRND.		Format
	DOLBY PL. II		Dual
	Mix 2CH		Shift + Subt
	C. S. M.		Red
	POSITION		Pre Ch
	AUDIO		Shift + Dual
	ZOOM		Eject











 

 







 
 





 
 


 



Originalfernbedienung Ersatzfernbedienung

	SETUP		Options
	MUTING		Mute
	FL DISPLAY		Shift + Info
	PAGE		Shift + 2
	GROUP		Shift + 3
	REPEAT		Text
	PLAY MODE		Shift + Play
	TEST		Yellow
	CH. SELECT		List
	QUICK REPLAY		Blue
	SUBTITLE		Subt







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power AV	 + 	Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10 / -/--		Guide
	Tv/AV		AV
	CH+		Ch +
	CH-		Ch -
	Tv Vol+		Vol +






 

 

 















 
 

 
 
 
 

 
Originalfernbedienung Ersatzfernbedienung

	Tv Vol-		Vol -




 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power AV		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10 / -/-		Guide
	>>		>>
	<<		<<
	<<<		<<<
	>>>		>>>

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Play		Play
	Stop		Stop

