 

 


 

 


 


 
 



 




Originalfernbedienung Ersatzfernbedienung

	Power Standby		Shift + Power
	Power On		Power
	Off Timer		AV
	Display		Info
	Wide		Format
	Menu / Enter		Menu
	Menu / Enter		Ok
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Exit		Exit
	Mute		Mute
	Volume +		Vol +
	Volume -		Vol -
	Zoom +		Ch +
	Zoom -		Ch -

Originalfernbedienung Ersatzfernbedienung

	Single		I<<
	Side By Side		<<
	Picture In Picture		>>
	Active Select		>>I
	Input Video 1		1
	Input Video 2		2
	Input Video 3		3
	Picture Memory		7
	Input DVD / HD 1		4
	Input DVD / HD 2		5
	Input DVD / HD 3		6
	PC / RGB		8

