 
 
 
 


Originalfernbedienung    Ersatzfernbedienung

POWER	POWER		Power
RESET	RESET		Volt / Focus
COMP.	COMP.		Comp / Video
VIDEO	VIDEO	 + 	Shift + Comp / Video
S-VIDEO	S-VIDEO		Mode
FREEZE	FREEZE		Freeze / Timer
MAGNIFY	MAGNIFY		+ / Play
K-STONE +	UP / K-STONE+		Up
SOURCE	LEFT / SOURCE		Left
SOURCE	LEFT / SOURCE		Source
ENTER	ENTER		Enter
AUTO ADJ.	RIGHT / AUTO		Right
AUTO ADJ.	RIGHT / AUTO		Auto
K-STONE -	DOWN /		Down
MENU	MENU		Menu
SOURCE LOCK	SOURCE LOCK	 + 	Shift + Source
AV-MUTE	AV-MUTE		Blank / Mute

Originalfernbedienung    Ersatzfernbedienung

	VOL-		Vol - / Page -
	VOL+		Vol + / Page +

