

 

 
 
 


 
 
 
 
 
 
 
 
 





 


 

 
 
 
 
 
 
 
 

 
 

 

 
 
 


 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	Mute		Mute
	Audio		Dual
	Subtitle		Subt
	Auto / Angle		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Shift + Guide

Originalfernbedienung Ersatzfernbedienung

	Goto		Shift + Smart
	PBC / EPG		Guide
	Recall		Back
	Exit / Return		Exit
	Menu		Menu
	Info / Display		Info
	View / TV/Radio		TV/R
	DVD / DVB		Smart
	Repeat		Shift + Text
	Text / Title		Text
	USB / Dev.List		List
	Filelist		Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok





**Originalfernbedienung Ersatzfernbedienung**

	Vol +		Vol +
	Vol -		Vol -
	Zoom		Shift + Eject
	CH +		Ch +
	CH -		Ch -
	FAV / Step		Pre Ch
	Play		Play
	Pause		Pause
	Stop		Stop
	<< / Page -		<<
	>> / Page +		>>
	I<<		I<<
	>>I		>>I
	Rec		Rec
	V-Mode		Format
	HDMI		AV
	Slow		Sleep

**Originalfernbedienung Ersatzfernbedienung**

	L / R		3D
	Timeshift		D. Menu
	Red / Prog		Red
	Green / Clear		Green
	Yellow / Setup		Yellow
	Blue / A- B		Blue

