


 
 
 

 



 


 
 
 
 
 
 
 



 

 
 







 
 
 

 






**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	OPEN/CLOSE		Eject
	SUBTITLE		Subt
	AUDIO		Dual
	ANGLE		Guide
	PS/IS		Green
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	GOTO		Shift + Guide

**Originalfernbedienung Ersatzfernbedienung**

	MUTE		Mute
	SETUP		Options
	SOURCE		AV
	TITLE		Red
	MENU		Menu
	UP		Up
	DOWN		Down
	RIGHT		Right
	LEFT		Left
	ENTER		Ok
	CH+		Ch +
	CH-		Ch -
	VOL+		Vol +
	VOL-		Vol -
	REC/OTR		Rec
	DISC OP		List
	TIMER		Shift + AV





Originalfernbedienung Ersatzfernbedienung

	PLAY		Play
	PAUSE/STEP		Pause
	STOP		Stop
	I<</PREV		I<<
	>>/NEXT		>>I
	RETURN		Back
	<</FB		<<
	DVD		Smart
	>>/FF		>>
	ERASE		Yellow
	TIMESHIFT		3D
	ADD/CLEAR		Exit
	RANDOM		Blue
	ZOOM		Shift + Eject
	HDD/DUB		Media
	EDIT		Shift + Exit
	DV/USB		D. Menu

Originalfernbedienung Ersatzfernbedienung

	FINALIZE		Pre Ch
	QUALITY		Shift + Back
	DISPLAY		Info
	A-B		TV/R
	REPEAT		Text
	PROGRAM		Sleep
	SORT/SLOW		Format

