







 

 
 
 











 

 



 

 









 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Pre Ch
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Nicam		Options

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep
	Source		AV
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Info		Info
	Media		Media
	Freeze		Smart
	Aspect		3D
	EPG		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu		Menu



