 
 

 
 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Timeshift		Media
	Recall		Back
	Mark		Smart
	Tv/Radio		TV/R
	Source		AV

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Menu		Menu
	Exit		Exit
	Text		Text
	EPG		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Rec		Rec
	I<<		I<<




Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	Audio/Lang		Dual
	Page Up		Shift + Ch +
	Page Down		Shift + Ch -
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	HDMI		D. Menu
	Zoom		Eject
	Subtitle		Subt
	Goto		Options
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

