























 















 


 












Originalfernbedienung	Ersatzfernbedienung
 Mode	 Power
 EPG/OSD	 Guide / EPG / -/--
 Tv/Musci/Repea	 TV/Radio /
 PIC	 Picture / Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Title/Favorite PR	 Sound / Title
 Menu/Memory	 Menu / Home
 Setup	 Setup / OPT /

Originalfernbedienung	Ersatzfernbedienung
 Subtitle	 Subtitle / EQ
 Zoom/Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer
 I<<	 I<< / Preset-
 I<<	 Shift + I<< / Preset-
 >>I	 Shift + >>I / Preset+
 >>I	 >>I / Preset+
 CH-	 CH- / Page-
 <<	 Shift + << /
 <<	 << / Tune-
 CH+	 CH+ / Page+
 >>	 Shift + >> /
 >>	 >> / Tune+
 Enter	 OK
 Angle/Teletext	 Text / Goto
 Slow/Guide	 Shift + Play /
 Audio	 Audio / Lang I/II





**Originalfernbedienung Ersatzfernbedienung**

	Play/Pause		Play / Slow
	Stop/PR List		Stop / Hold
	PG Up/Info		Up
	PG DN/Sleep		Down

**Originalfernbedienung Ersatzfernbedienung**