 

 
 

 

 

 
 
 


 
 

 

 

 

 

 

 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	USB/Card		AV / Input / RDS
	Display		Display / Media
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Goto		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	10+		Guide / EPG / -/--
	Title		Sound / Title
	Stop		Stop / Hold
	Setup		Setup / OPT /
	Zoom		Zoom / Size
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	Vol+		Vol+
	Vol-		Vol-
	Play/Pause		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	LCD-Mode		Smart / List
	N/P		Back / Return
	Prog		TV/Radio /
	Menu/PBC		Menu / Home

