 

 



 

 

 

 

 

 

 

 

 



 









 

 

 
 
 

 

 

 

 

 

 

 

 

 

 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Epg / Setup		Picture / Format
	Dvd / Av / Dtv		AV / Input / RDS
	Dvd/usb/card		Shift + 2
	Info / Osd		Info / Angle
	→←Search		Zoom / Size
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Menu		Menu / Home
	Exit/Title		Exit / Cancel / Clear
	Fav / Zoom		Fav / Marker / PC
	Up		Up
	Ch+		CH+ / Page+
	Down		Down
	Ch-		CH- / Page-
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Right		Right
	Vol+		Vol+
	Ok		OK
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	10+		Guide / EPG / -/-
	Dvd Vol+		Shift + Vol+
	Dvd Vol-		Shift + Vol-



