




 



 

















 















 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Lang		Audio / Lang I/II
	4		4
	5		5
	6		6
	Tv/Radio		TV/Radio /
	7		7
	8		8
	9		9
	Dev.List		Smart / List
	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return

Originalfernbedienung Ersatzfernbedienung

	Info		Info / Angle
	Menu		Menu / Home
	Up/CH+		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	Vol-		Vol-
	Enter		OK
	Right		Right
	Vol+		Vol+
	Text		Text / Goto
	Down/CH-		Down
	EPG		Guide / EPG / -/-
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	I<<		I<< / Preset-
	Rec		Rec / Rec Mode



