



























 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop/Eject		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	I>/Slow		>>I / Pre-set+
	Count Reset		Picture / Format
	Count Stop		Zoom / Size
	Clock Counter		Sleep / Timer
	Tv/VCR		TV/Radio /
	OTR		Setup / OPT /
	PGM Set		Menu / Home
	Index+		Up
	T-Rec		Info / Angle
	Sharpness/V.Hold-		Left













 



 



Originalfernbedienung Ersatzfernbedienung

	Index Search		OK
	Sharpness/V.Hold		Right
	PGM		Exit / Cancel / Clear
	Index-		Down
	Enter/CH.Memo		Back / Return
	+/MFT+		Vol+
	Tv Line		Smart / List
	CH/Tracking+		CH+ / Page+
	-/MFT-		Vol-
	Display On/Off		Display / Media
	CH/Tracking-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	AFT Retracking		Guide / EPG / -/--
	0		0
	CH Preset		Fav / Marker / PC
	Auto Search		Red / Netflix / Search
	Clock Set		Green / APP / Repeat
	Search Down		Yellow / YouTube / Repeat
	Search Up		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

