
 


 







 



 




 








 




 



 









 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Index		Media
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Display		Info
	Sleep		Sleep
	CH +		Ch +
	CH -		Ch -

Originalfernbedienung Ersatzfernbedienung

	Q.V		Smart
	TV / AV		AV
	V +		Vol +
	V -		Vol -
	Up / CH +		Up
	Down / CH -		Down
	Right / V +		Right
	Left / V -		Left
	Menu		Menu
	Menu		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	I / II		Dual
	→ISI←		Shift + Dual
	→IPI←		Format



