















 



 






 
















 
















 







Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Guide / EPG / -/-
	I/II		Audio / Lang I/II
	SWAP / RED		Back / Return
	SWAP / RED		Red / Netflix / Search
	AV		AV / Input / RDS
	FREEZE		Pause / Step / Freeze









 


 

 

 

 

 

Originalfernbedienung Ersatzfernbedienung

	GAME / BLUE		Blue / Prime Video / Random
	SLEEP / GREEN		Green / APP / Repeat
	SLEEP / GREEN		Sleep / Timer
	STATUS /		Yellow / YouTube / Repeat
	PP/CANCEL		Exit / Cancel / Clear
	P.S		Display / Media
	MUTE		Mute / Dimmer
	UP		Up
	CH+		CH+ / Page+
	TV/TEXT		Text / Goto
	LEFT		Left
	VOL-		Vol-
	MENU		Menu / Home
	RIGHT		Right
	VOL+		Vol+
	DOWN		Down
	CH-		CH- / Page-





Originalfernbedienung Ersatzfernbedienung

	INDEX		Info / Angle
	T.MODE		Setup / OPT /
	ZOOM/SIZE		Zoom / Size
	HOLD		Stop / Hold
	REVEAL		Play / Slow
	MIX	 + 	Shift + Text /
	OK		OK
	T. BRI		Smart / List
	PIP/POP		Picture / Format
	MP/SP		Sound / Title

Originalfernbedienung Ersatzfernbedienung

