


 
 
 





 







 










 
 





Originalfernbedienung Ersatzfernbedienung

 VHS/DVD Power	 Power
 Direct TV Rec	 Subt
 VHS/DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Cancel / Reset	 Exit
 Input Select	 Guide
 CH+ / Tracking/V-Lock+	 Ch +
 CH- / Tracking/V-Lock-	 Ch -

Originalfernbedienung Ersatzfernbedienung

 Create Chapter	 TV/R
 I<< Skip	 I<<
 Skip >>I	 >>I
 REW / << Slow/Search	 <<
 FF / Slow/Search	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Direct Navigator / Top Menu	 D. Menu
 Functions	 List
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Sub Menu	 Menu
 Return	 Back



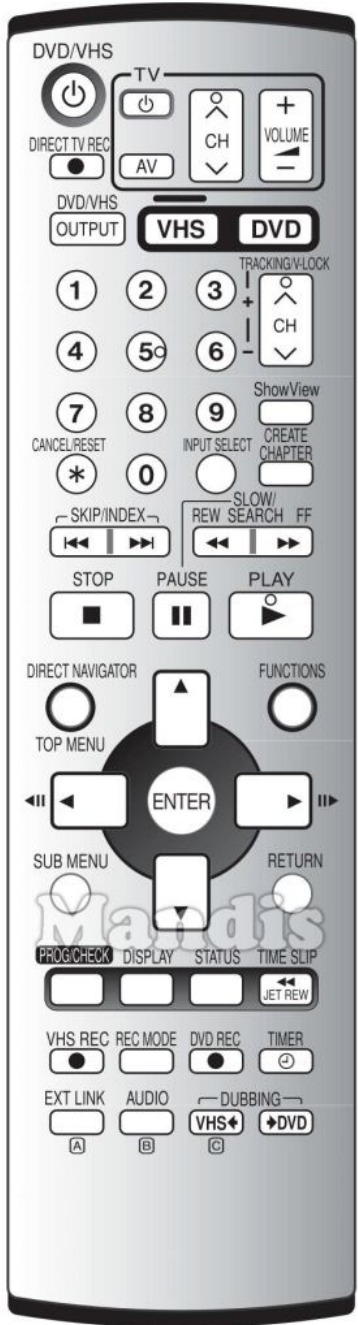


Originalfernbedienung Ersatzfernbedienung

	Prog / Check		Sleep
	Display		Info
	Status		Media
	Time Slip		Vol +
	Timer		AV
	Ext Link		3D
	Audio / B		Dual
	Dubbing		Blue

Originalfernbedienung Ersatzfernbedienung



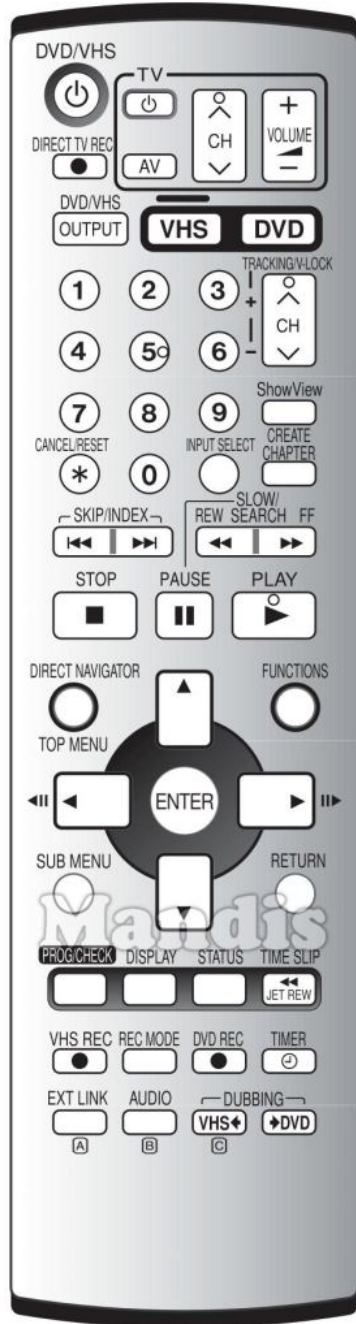


Originalfernbedienung Ersatzfernbedienung




 



 
 
 


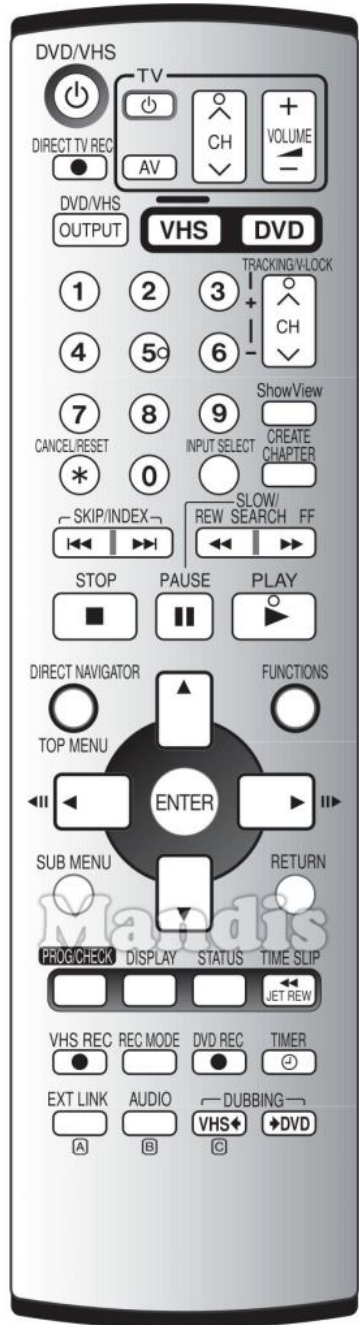
 

 

 

 


 
 
 
 

 






	Power		Power
	AV		AV
	Volume+		Vol +
	Volume-		Vol -
	CH+		Ch +
	CH-		Ch -

Originalfernbedienung Ersatzfernbedienung






Originalfernbedienung Ersatzfernbedienung

	VHS/DVD Power		Power
	Direct TV Rec		Subt
	VHS/DVD		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel / Reset		Exit
	Input Select		AV
	CH+ / Tracking/V-Lock+		Ch +
	CH- / Tracking/V-Lock-		Ch -

Originalfernbedienung Ersatzfernbedienung

	ShowView		Media
	I<< Index		I<<
	Index >>I		>>I
	REW		<<
	FF		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Return		Back
	Prog/Check		Sleep
	Display		Info
	Jet Rew		Shift + <<



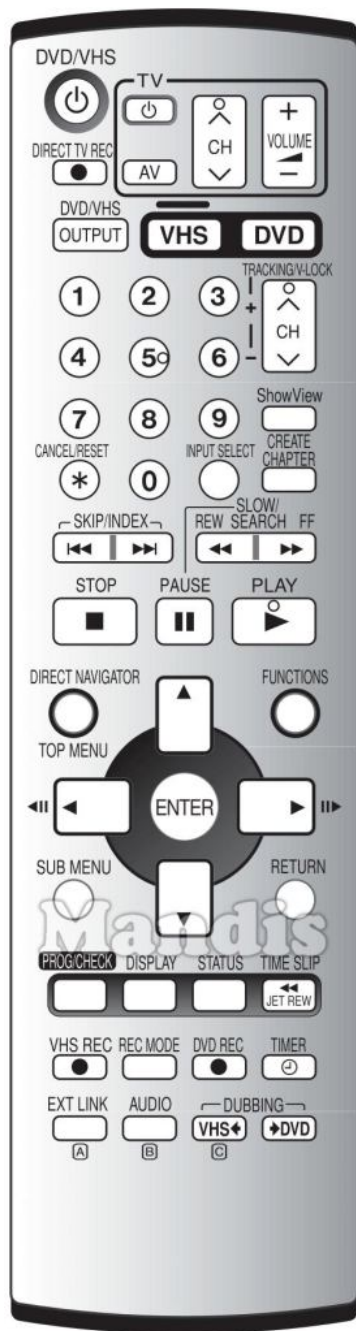

Originalfernbedienung Ersatzfernbedienung

VHS REC	Rec	REC MODE	Rec
REC MODE	Rec Mode	SHIFT + REC MODE	Shift + Rec
TIMER	Timer	SHIFT + TIMER	Shift + AV
EXT LINK	A / Ext Link	A	Red
AUDIO	Audio / B	SOUND DUAL	Dual
DUBB VHS+	Dubbing	E-MANUAL D.MENU	D. Menu

Originalfernbedienung Ersatzfernbedienung

