


 

 

 



 

 
 

 

 






































 










Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Exit		Exit / Cancel / Clear
	Up		Up
	CH+		CH+ / Page+
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Vol+		Vol+
	Right		Right
	CH-		CH- / Page-
	Down		Down
	EPG		Guide / EPG / -/-
	Red		Red / Netflix / Search
	TTX		Text / Goto
	Blue		Blue / Prime Video / Random
	Audio		Audio / Lang I/II
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Subtitle		Subtitle / EQ
	i		Info / Angle
	FAV		Fav / Marker / PC
	Tv/Radio		TV/Radio /





**Originalfernbedienung**    **Ersatzfernbedienung**

	Video	+	Shift + 4
	Scan		AV / Input / RDS
	Record		Rec / Rec Mode
	Device		Smart / List
	File		Display / Media
	Zoom		Zoom / Size
	Prev		<< / Preset-
	Next		>>  / Preset+
	Roll		Sound / Title
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+

**Originalfernbedienung**    **Ersatzfernbedienung**