

 




 
 


 


 

 

 

 

 
 
 
 
 
 
 

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[≡i]/Info		Info
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡?]/Source		AV
	(O/I/II/Audio		Dual
	Menu		Menu
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Index		Media
	List		List
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	♥		Pre Ch
	Sleep		Sleep
	EPG		Guide
	Recall		Back
	Red		Red
	<<		<<





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	>>		>>
	Green		Green
	Yellow		Yellow
	l<<		l<<
	>>l		>>l
	Blue		Blue
	[≡]		Text
	Play		Play
	Pause		Pause
	Stop/Still		Stop
	[≡+]		Format
	Radio		TV/R
	[≡♦]/[+]		3D
	[≡x]		Options
	[≡O]/Subtitle		Subt
	DMP		Smart
	Rec		Rec

