




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Setup		Options
	Mute		Mute
	Function		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Subtitle		Subt
	Digest		Smart

Originalfernbedienung Ersatzfernbedienung

	EPG		Guide
	Info		Info
	FAV		Pre Ch
	Red/Photo		Red
	Green/Music		Green
	Yellow/Movie		Yellow
	Blue/Calendar		Blue
	Zoom		Eject
	Teletext		Text
	Tv/Radio		TV/R
	Recall		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Play/Pause		Ok



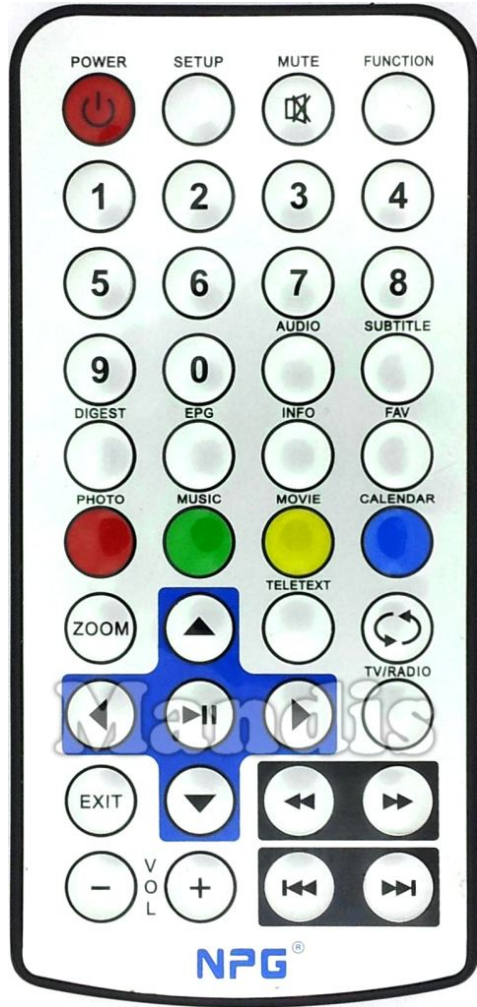

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	>>		>>
	<<		<<
	Vol+		Vol +
	Vol-		Vol -

